

MAG-DRO®

MITRE SLOT BASE


MAKING A HEIGHT FIXTURE FOR THE MITRE SLOT BASE

ITEMS NEEDED:


1. MAG-DRO Mitre Slot Base
2. $\frac{3}{4}$ " X 3" X 9" board
3. 4 each 1 $\frac{1}{8}$ " long drywall screws
4. Clamp

INSTRUCTIONS:

1. Cut the board to match the drawing shown

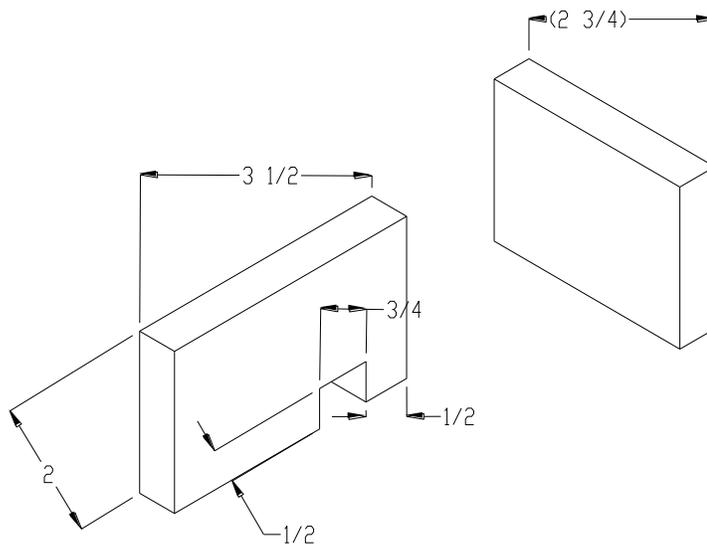


2. Screw the Mitre Slot Base with 2-drywall screws to the main board as shown in drawing.

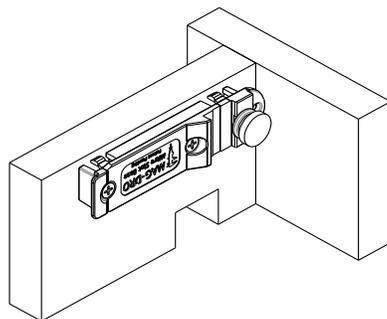

MAG-DRO®

3. With the boards pressed down on a flat surface clamp the boards together and screw the 2-drywall screws flush. Remove the clamp from the unit.

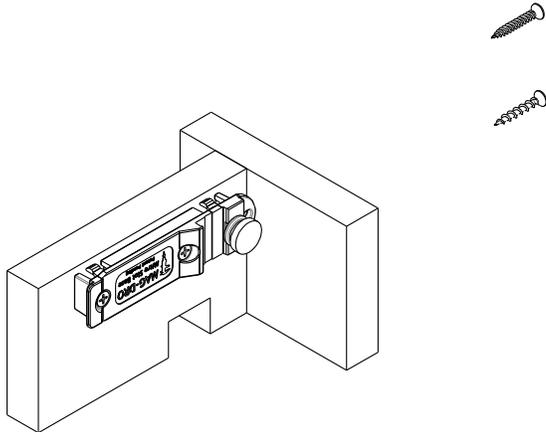

4. Test to make sure that the unit sits flat

